

# FE - FORK EXTENSIONS SPECIFICATION



## FE -Fork Extensions

Fork Extension Sleeves provide a simple and effective handling solution for awkward loads. Bespoke sizes available on request.

Altru's fork extensions conform to ISO 13284 The British Standard for Fork Extensions.

### SPECIFICATION

Product Code	UDL Per Pair (kg)	Pocket (mm)	Length (mm)	Weight Per Forks (kg)
FE-1800	4000	148 x 60	1829	26
FE-2400	4000	148 x 60	2440	39

**BESPOKE SIZES AVAILABLE ON REQUEST**

**PHONE: 01922 644 432**  
**EMAIL: [sales@tippingskips.com](mailto:sales@tippingskips.com)**  
**VISIT: [www.tippingskips.com](http://www.tippingskips.com)**

## INSTRUCTIONS FOR SAFE USE.

### USING THE EQUIPMENT

Set the forklift's forks to the required working width.

Approach the fork extensions with the forklift and line the forks up with the extensions.

Detach the heel pin from the extensions and then insert the forks into the extensions ensuring they are mounted as far back on the forks as possible.

Re-attach the heel pin of each extension ensuring the assembly goes behind the heel of the fork and so securing both extension to the fork lift.

The forklift extension forks are designed to lift and move loads in a safe manner. Always ensure that the load does not exceed the universally distributed load rating on the extensions and **DO NOT** drag the load as this will put undue stress on the heel pins.

Once the heel pins have been replaced and the extensions are secure drive the forklift to the intended load. Enter the load ensuring that it is as far onto the extensions and as close to the forklift carriage as possible.

Now raise the load and check that it is balanced and secure. Once all is okay move the load to the desired location in a smooth and safe manner ensuring that you do not jolt. Now lower the load until grounded. Reverse the fork lift out of the load until the fork extensions are completely clear.

Once the last load has been moved and the operator is finished with the extensions, lower the forks to the ground and release the heel pins. Reverse the forklift out of the extensions then replace the heel pins ensuring they are available for the next use.

Once the forklift has been moved away the fork extensions can be moved to their storage location.

## MAINTENANCE

The equipment should be examined prior to use to ensure it is in good working order and free from defects and damage.

**\*This equipment requires inspection under PUWER not LOLER regulations**

## WARNING

ALWAYS REFER TO THE LOAD PLATE AND MANUFACTURERS GUIDELINES  
DO NOT OPERATE OVER PERSONNEL  
DO NOT OVERLOAD  
DO NOT USE IF FAULTY OR DAMAGED



**PHONE: 01922 644 432**  
**EMAIL: [sales@tippingskips.com](mailto:sales@tippingskips.com)**  
**VISIT: [www.tippingskips.com](http://www.tippingskips.com)**